



AIM - Advanced Illuminated Markers



A user-friendly, tailor-made **Marking System** that can be used in many different applications across the military or Emergency Services sectors.

This new Tactical dispenser has a capacity of up to 20 illumination devices, is ergonomic in design and fits comfortably into your hand.

Simply push the slider at the top of the dispenser to activate and eject each Tablet.

The AIM colour is clearly seen through the mouth of the dispenser.

Advantages:

- Reduce your logistic and storage burden
- Compact, lightweight and Eco-friendly
- Reduce transportation costs
- The dispenser can be easily removed from its holder and activated with one gloved hand.
- The tablets are clearly seen with the naked eye at 250 Meters
- Recyclable - biodegradeable
- Each dispenser holds up to 20
- Tablets are easily loaded into the dispenser
- Re-Usable
- Turn on-off
- Waterproof
- Lightweight
- Long illumination - up to 24 hours
- Functions in temperatures as low as -5°C
- Works underwater once activated
- Colours same as chemical, including Infrared
- UK made - ISO 9001 Approved

DIMENSIONS	L 165 x W 26 x D 32 mm
WEIGHT	65 grams
MATERIAL	Glass filled Nylon





AIM - Advanced Illuminated Markers

COLOURS: WHITE/ORANGE/RED/YELLOW/GREEN/BLUE/I.R.



USING THE AIM



SLIDE the cover down on the back of the activator and insert the AIM tablets.



Ensure that the LONG CONTACTS are in the UP position



When the AIM tablets are loaded, SLIDE the cover back to the TOP



To ACTIVATE the AIM tablets, push the top Lever FORWARD with your thumb



Push the slider at the top to eject each AIM Tablet.

Illumination times per AIM tablet:
24 hours operational.
36 hours before the light is extinguished or until you turn it off.


REPLACING THE AIM TABLETS

Once the tablets have been ejected from the dispenser, they can be de-activated or activated again by following these instructions :



To turn the tablets OFF -

Allow the SHORT contacts to touch the METAL ROD on the bottom of the DISPENSER.

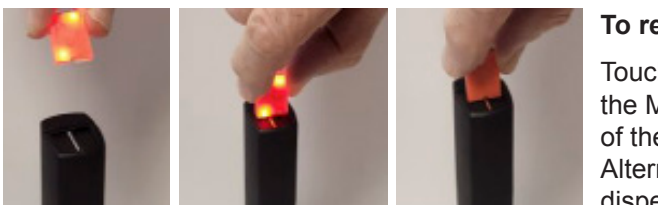

To reactivate the tablets -

Touch the LONG contacts onto the METAL ROD on the bottom of the TABLET. Alternatively, reload into the dispenser.



To insert MARKER SET:

Slide the side cover of dispenser down and insert up to 20 tablets. Push the cover back into place to use

OPTIONS -

AIM tablets are available with adhesive tape or plain backs.

TABLET SIZE:	20 mm x 15mm x 5 mm
TABLET WEIGHT:	2 grams
BATTERY TYPE:	1025 cell Li-on 3.2V
LED/TABLET:	4 LED
Shelf life:	5 Years
Operational Temperature:	From -5°C to +50°C

